

Flip Down LCD Monitor with Multimedia Player

Operating Instructions




Please read this instruction before operating this machine


Notice

- 1 This unit is designed for 12V DC, negative ground operation system only. Before installing the unit, make sure your vehicle is connected to DC 12V negative ground electrical system.
- 2 Connect the wire shown as the wire connecting drawing. If the connection runs wrong, it may cause the troubles of the machine or damage the electric system of the vehicles.
- 3 You can't turn on it until all connection is right.
- 4 When changing the burned-out fuse, please replace it with a new one with the same specification.
- 5 Do not the attempt to modify the unit, otherwise, it probably cause an accident.
- 6 Please park the car in the safe place before do any operation that could interfere with your driving.
- 7 Please do not work under high or low temperature. Please confirm the inside temperature range is -10°C to 60°C before turning on the unit.
- 8 To enjoy optimum sound and pictures while playing, handle the discs as follows:

- ① Handle the disc by its edge to keep it clean, and do not touch the surface.

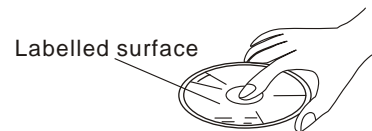

 
Insert the cell into the remote controller.

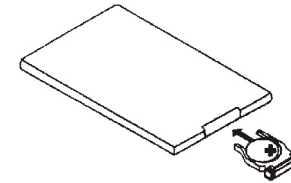

Note:


- ☆ Keep lithium cell away from the place children could reach. If there is a child swallow it for careless, please take him to hospital.
- ☆ Using dry cloth to clean the cell to ensure good connection.
- ☆ Please confirm the polarity of the cell when insert it.
- ☆ Don't grip the cell with metal pliers, or there will be short circuit.

 Warning	<p>With inappropriate operation, the cell would explode.</p> <p>The cell could not be charged, disassembled or fired.</p>
--	---

Maintenance:

1. Renew of fuse


When you renew fuse, you must confirm that amperage of used fuse is suitable. If the fuse is burn-out, please check connection of power supply and renew fuse. If the renewed fuse is burn-out again, it should be a problem inside. In this case, please consult a distributor.

 Warning	Please don't use the fuse that its specified amperage exceeds that of this system. otherwise system would be broken.
---	--


2. Renew of lithium cell

When the operation distance of remote controller become short or it has no action, please renew lithium cell of CR2025. Please identify the polarity of the cell, operation is as follows:

1.1 While you are pressing plug, you should pull out lightly the cell foundation at the same time.

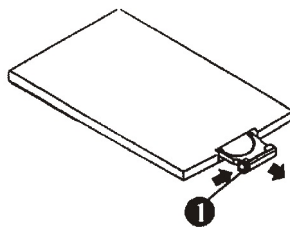

1.2 Place the button cell in it with the mark "+" upward.

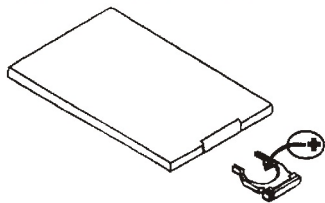


② Please do not use the discs with paste residue or ink attached.



③ Please do not use the discs with labels or stickers which may leave a sticky residue while beginning to peel off (shown as picture).



④ Clean the discs with the special soft cloth, wipe each disc from centre to edge.

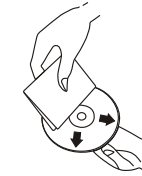

9. When the picture quality will be affected for humidity, please switch on the power (do not put disc in it), and let the system run one to two hours in order to evaporate.

10. Please do not play the damaged or anamorphic discs.


11. DVD player is a kind of laser product, please do not open it by yourself in order to avoid danger.

Installation and Repairing:

1. Install it by professional. When installing it, please consult to the local dealer.

2. Do not maintain it by yourself, if the unit need be repaired, please consult to the local dealer and do it by professional.

Instructions for position & function

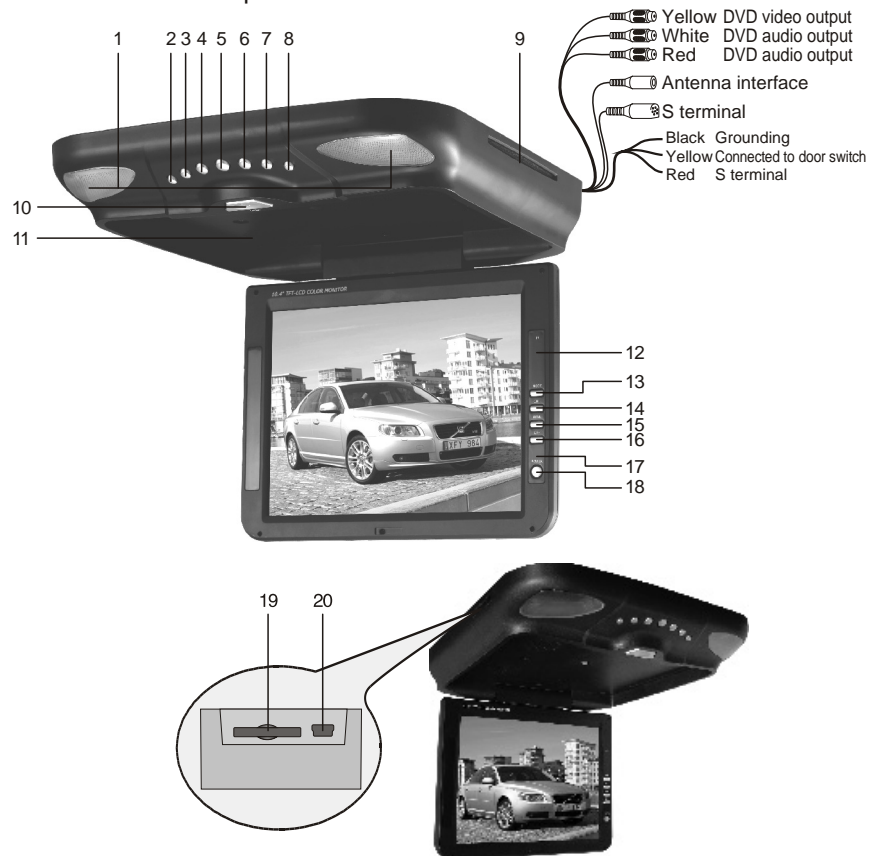


- 1. Light
- 2. SD/USB/Disc switch
- 3. Last track
- 4. Next track
- 5. Light switch
- 6. Stop
- 7. Play/Pause
- 8. Eject button
- 9. CD Slot
- 10. Open button

- 11. Loudspeaker
- 12. IR headphone transmission window
- 13. Mode switch
- 14. CH+ or “+” (If no TV function)
- 15. Menu
- 16. CH- or “-” (If no TV function)
- 17. Remote control reception window
- 18. Power switch
- 19. SD Slot
- 20. USB Slot

- Yellow DVD video output
- White DVD audio output
- Red DVD audio output
- Antenna interface
- S terminal
- Black Grounding
- Yellow Connected to door switch
- Red S terminal

- 22. ZOOM
Press this key to zoom the picture.
- 23. Direction
Press ▲, ▼, ◀, ▶, CH- keys to select the submenu item, press ▶, CH+ to adjust. In tv mode press ▲, ▼, CH- to select the channels.
- 24. ENTER
Press this key to enter chosen item.
- 25. SETUP
Under DVD mode, press this key to shift from the different setup items. Press Direction and ENTER to select and confirm.
- 26. VOL+
Press this key to increase volume.
- 27. VOL-
Press this key to decrease volume.
- 28. 10+
When need press two digits number, press this key.
- 29. PBC
Press this key to turn off or turn on the main menu.
- 30. TFT MENU
Press this key to enter the main menu system.

 Warning	<p>When no Disc in slot, and under stand by or TV or AV modes. Put the Disc in slot, the unit will auto turn on and switch to DVD mode.</p>
---	---

12. 1-0 number key

When PBC turns off, you could press keys to select the tracks from 1 to 0.

13. REPEAT

During the playing mode, press this key once to repeat a segment, at this time, it displays “segment repeat” . Press this key again to play title again, at this time, it displays “title repeat” , press this key to turn off the function.

※ When MP3 disc is playing, it repeats whole disc, single song and catalogue.

14. TITLE

Under DVD mode, press this key to return to the top menu.

15. SUBTITLE

Under DVD mode, press this key to shift language on screen.

16. RETURN

Under play mode, press this key to return to the playing position to play from the main menu.

17. DVD MENU

Press this key to display main menu of DVD disc, press it again to play.

18. PROGRAM

Under CD/MP3/VCD mode, turn off PBC function to play in program.

19. AUDIO

In DVD mode, press this key to select the modes among Disc, USB, SD.


20. ANGLE

Under DVD mode, press this key to change the playing angle.

21. MUTE

Press this key to cancel volume electrical level output, press it again to recover.

Wiring Connection:

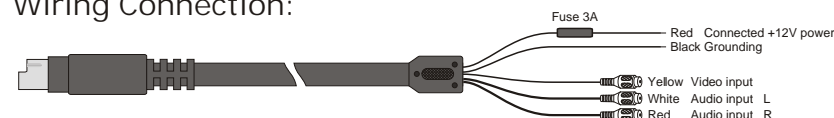

Specifications


Type: TFT LCD	Power consumption: approx.24W
Screen size: 10.4"	TV System: PAL/NTSC/SECAM (Optional)
Display mode: 4:3	Resolution: 800×RGB×600=1440000
Power voltage: 12V	Rotating angle of screen: ±90°
FM Frequency: 87.7~89.2MHz, 14 Frequency points. (Optional)	
IR Frequency: 2.3/2.8MHz (Optional)	

Operation

1. Press the button “ Open” to open the screen, and press the button 18 “Power Switch” to switch on the power.
2. Press the key 5 to turn on/off the light.
3. In any state, the mode can be switched among “DVD, TV, AV” by pressing the key 13.


Press MENU or TFT MENU on the remote control to select the required menu.

Main menu:

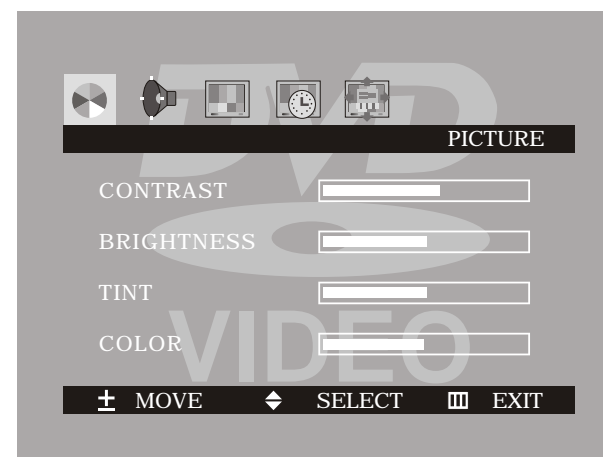

1. Main menu consists of PICTURE, AUDIO, CHANNEL, FUNCITON and OSD.
2. Press MENU or TFT MENU on the remote control to select the required menu, press MODE or ▲, ▼^{CH-} on the remote control to select sub-menu, press CH-, CH+ or ◀, ▶^{CH+} to adjust the sub-menu item, to return to main menu, just press MENU or TFT menu on the remote control.

 Picture Menu

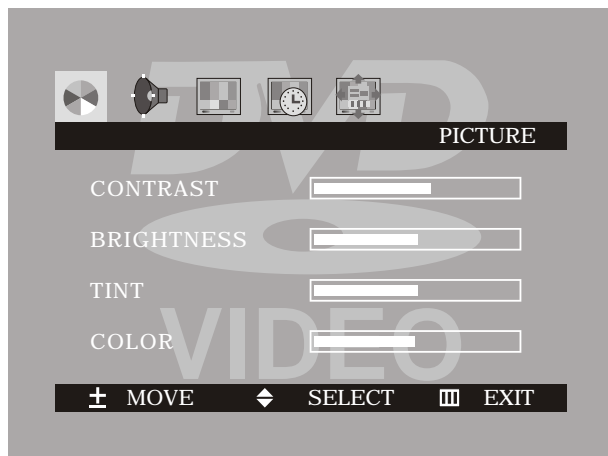


1. Submenu consists of Brightness, TINT, Color, Sharpness, Color Temp and Picture Mode.
2. Press MODE or ▲, ▼^{CH-} on the remote control to select sub-menu, press CH-, CH+ or ◀, ▶^{CH+} to adjust the sub-menu item. Press MENU to return to main menu.

Note: TINT can only work at NTSC.

Remote controller operation:

1. POWER
Press this key to turn on or turn off the power.
2. EJECT
Press this key to eject disc.
3. MODE
Press this key to select the modes among AV, DVD, TV.
4. PLAY/PAUSE
While playing CD/MP3/VCD/DVD, press this key to pause, press it again to play.
5. FF
During the playing mode, press this key to fast forward, you can choose from 2×, 4×, 8× and 20×.
6. Next (next track)
During the playing mode, press this key to choose next track.
7. BACK (Last track)
During the playing mode, press this key to choose last track.
8. FR
During the playing mode, press this key to play fast return, you can choose from 2×, 4×, 8× and 20×.
9. STOP
During the playing mode, press this key once to pause, if you want to play, just press the key "Play" . Press the key "Stop" twice continuous, it will stop playing. Press the key "Play" , it will replay from the beginning.
10. SLOW
During the playing mode, press this key to play slow, you could choose from 1/2× to 1/7×.
11. DISP
Press this key to display the playing state.

Remote controller instruction

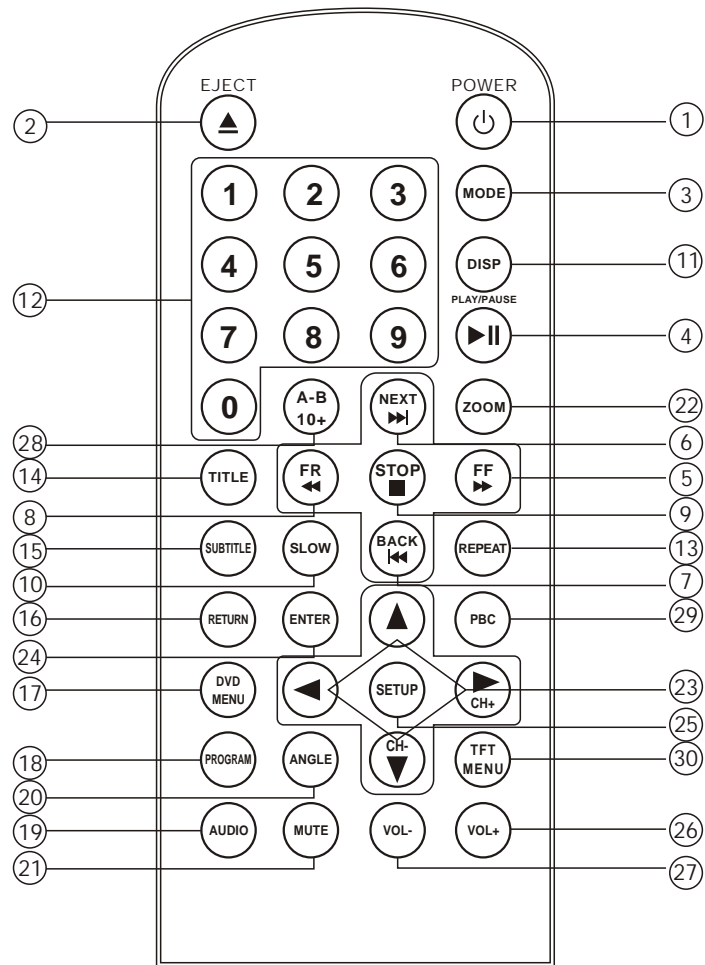


Audio Menu



1. Submenu consists of Volume, Audio Control and FM.
2. The operation is same as the other modes.

 
Channel Menu

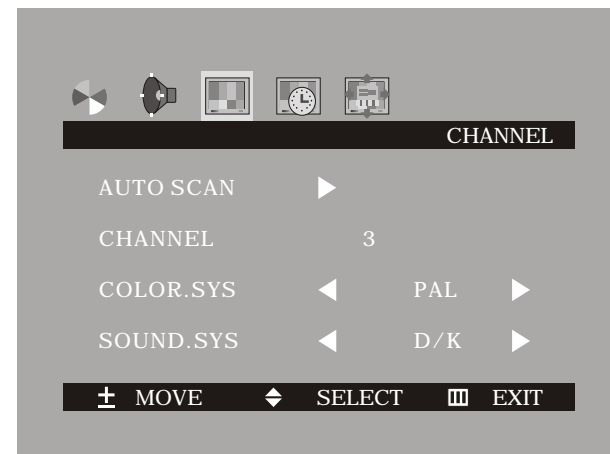

Note: This menu only valid at TV mode.


1. Submenu consists of AUTO Scan, Channel, Color.SYS, Sound.SYS, Skip, Manual, Fine and Swap.
2. The operation is same as the other modes.

Function Menu

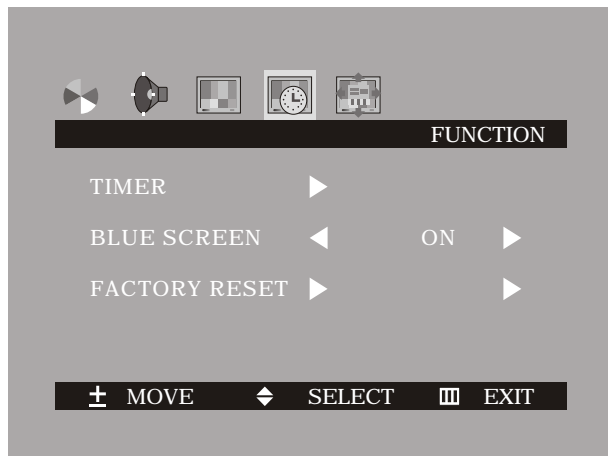

1. Submenu consists of Timer, Blue Screen and Factory Reset.
2. The operation is same as the other modes.

OSD Menu

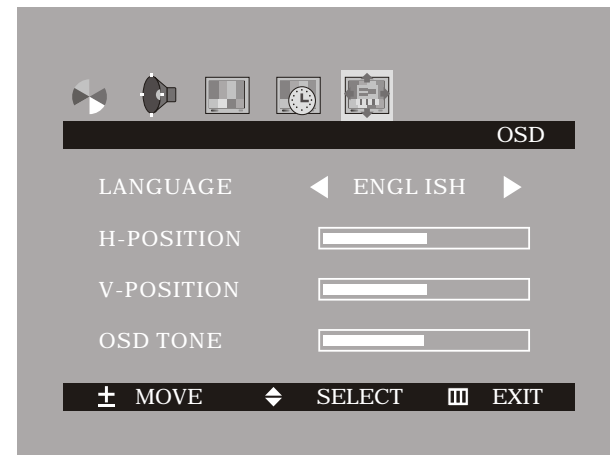

1. Submenu consists of Language, H-Position, V-Position and OSD Tone.
2. The operation is same as the other modes.